

## Instruction manual

# Transmitter & Converter

### Accessory for WEKA Visual Level Indicators (VLI)

#### Transmitter

29710-x

31967-x

32607-NI

32608-ND

## Contents

|  |    |
|--|----|
| 1. Symbols and signs used in the instruction manual .....        | 2  |
| 2. Safety notes and warnings.....                                | 2  |
| 3. Intended use .....  | 3  |
| 4. Overview of transmitters and converters.....                  | 4  |
| 5. Type codes .....  | 5  |
| 6. Functional description .....                                  | 6  |
| 7. Bi-stabile switch function.....                               | 7  |
| 8. Scope of delivery .....                                       | 8  |
| 9. Unpacking.....  | 8  |
| 10. Disposing of packaging materials .....                       | 8  |
| 11. Dismantling / Disposal .....                                 | 8  |
| 12. Assembly .....   | 9  |
| 13. Electrical installation .....                                | 12 |
| 14. Commissioning of reed transmitters.....                      | 12 |
| 15. Maintenance .....  | 13 |
| 16. Technical data .....   | 13 |
| 17. Troubleshooting.....   | 14 |
| 18. Transport and storage conditions .....                       | 15 |
| 19. Labelling .....  | 15 |
| 20. Customer service .....                                       | 15 |
| 21. EU Type-examination certificates .....                       | 16 |
| 22. Declaration of safeness for shielded cable (NI version)..... | 20 |
| 23. IECEx Certificate of conformity .....                        | 21 |
| 24. Conformity declarations .....                                | 27 |
| 25. Statement for transmitter with HART converter .....          | 29 |

