

## PRESSURE AND LEVEL TRANSMITTER

### WARNING

Read the installation and wiring instructions for correct and consistent installation, and to obtain product performance. Take care not to damage or alter the transmitter, including any components, during the normal delivery or return.

## SERIES 8000-VALVE-RANGE

